


Installation Instruction

for

Fiber optic cables and closures

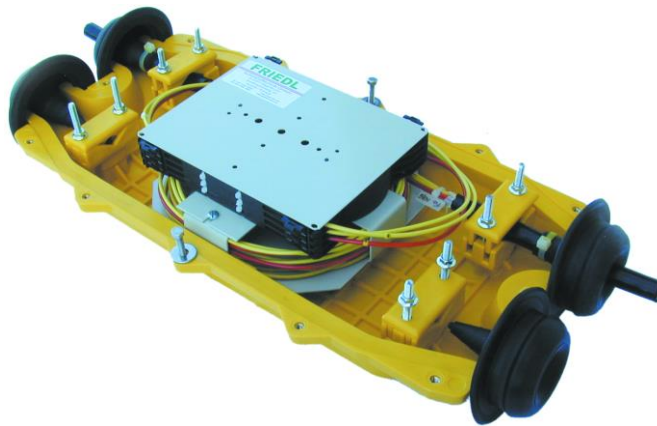

Typen: FRIEDL	max. ø mm	Entry	maxim. Splice cases	max. Cores	
				Adapter Shrink	Adapter Crimp
MAM 23/200	23	4	5	120	120
MAM 42/320	42	4	11	264	264
MAM 71/500	71	6	13	312	312

- Shrink- or crimp adapter alternative.

These instruction are provided for the trained craftperson. Permissible ambient temperatures for installation: -20° C to +50° C

II.) Installation Instructions for fiber optic cables

II.) Step 1 Cable classification

as described in chapter I.) step 1

II.) Step 2 Cut end cap

as described in chapter I.) step 2

II.) Step 3 Pull end cap on the cable

as described in chapter I.) step 3

II.) Step 4 Position end caps and establish splice

- 1 Position end caps as described in chapter I.) step 4
- 2 Prepare cables
- 3 If needed make loops of the fiber optic cables into the preinstalled reserve loop holder.
- 4 Insert and fix the splice case adapter.
- 5 Insert and install the fiber optic splice cases.
- 6 Establish the splice.
- 7 Cover the top splice case with the lid by fixing it with the screws.

II.) Step 5 Installation of strain relief and end caps




as described in chapter I.) step 5

II.) Step 6 Fix top half shell and turn end cap

as described in chapter I.) step 6

II.) Step 7 Fix end cap

as described in chapter I.) step 7

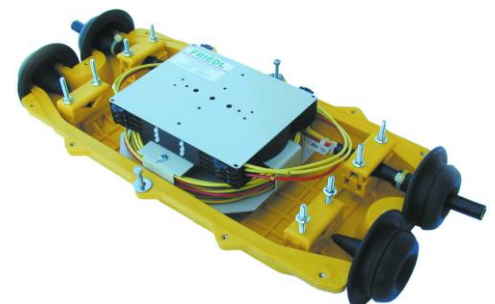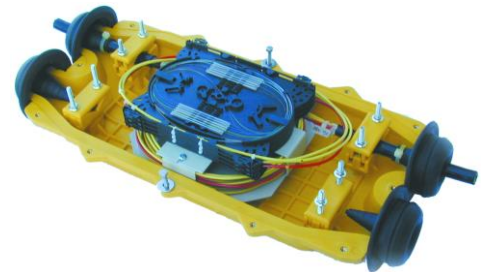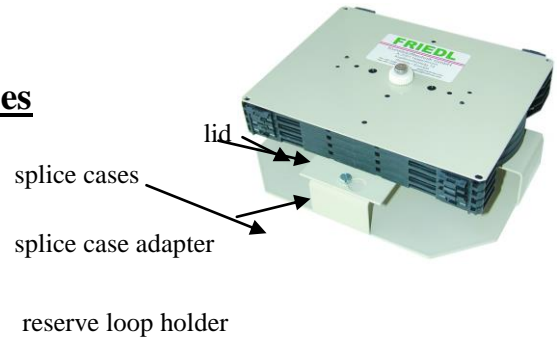

Please note the installation instruction for FRIEDL mechanical closures!